


Freeze Protection, VC Models:

Rinnai®

Ceramic heater activation temperature	On	Off
Indoor VC models	Hex Thermistor 44.6°F OR Air Inlet Thermistor 30.2°F	Hex Thermistor 53.6°F AND Air Inlet Thermistor 39.2°F
Outdoor VC models	Outside Air Thermistor (ambient) 37.4°F to 32°F – Heaters 15 min ON – 10 min OFF 32°F to 26°F – Heaters 20 min ON – 5 min OFF 26°F and Below – Heaters on continually	

Units will fire momentarily if Heat Exchanger Thermistor senses below 37.4°F

Two ceramic heaters are on the left pipes of the heat exchanger (indoor only)

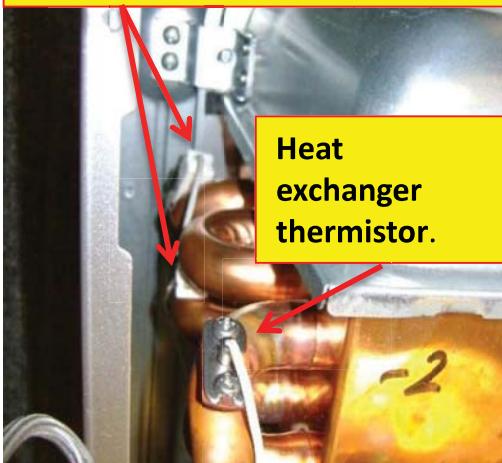

• 6 ceramic heaters
Interior units


• 5 ceramic heaters
Exterior units

One long ceramic heater
on the right side of the
heat exchanger



One ceramic heater on hot
water outlet pipe (exterior
unit only)

Two round ceramic heaters
on the water flow servo and
hot water outlet

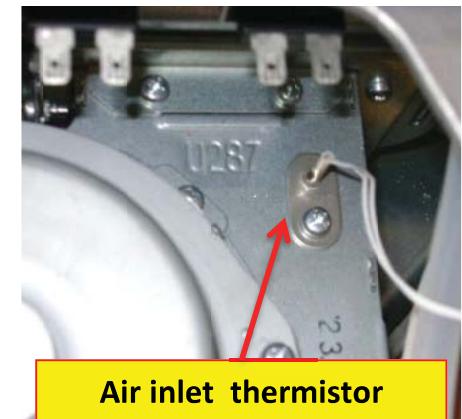

Air inlet thermistor



Outside Air thermistor




One ceramic heater is on
the cold water inlet beside
thermistor

Enhancing Lives By Changing The Way Water Is Heated

Heat Exchanger Heater Locations:


Rinnai®

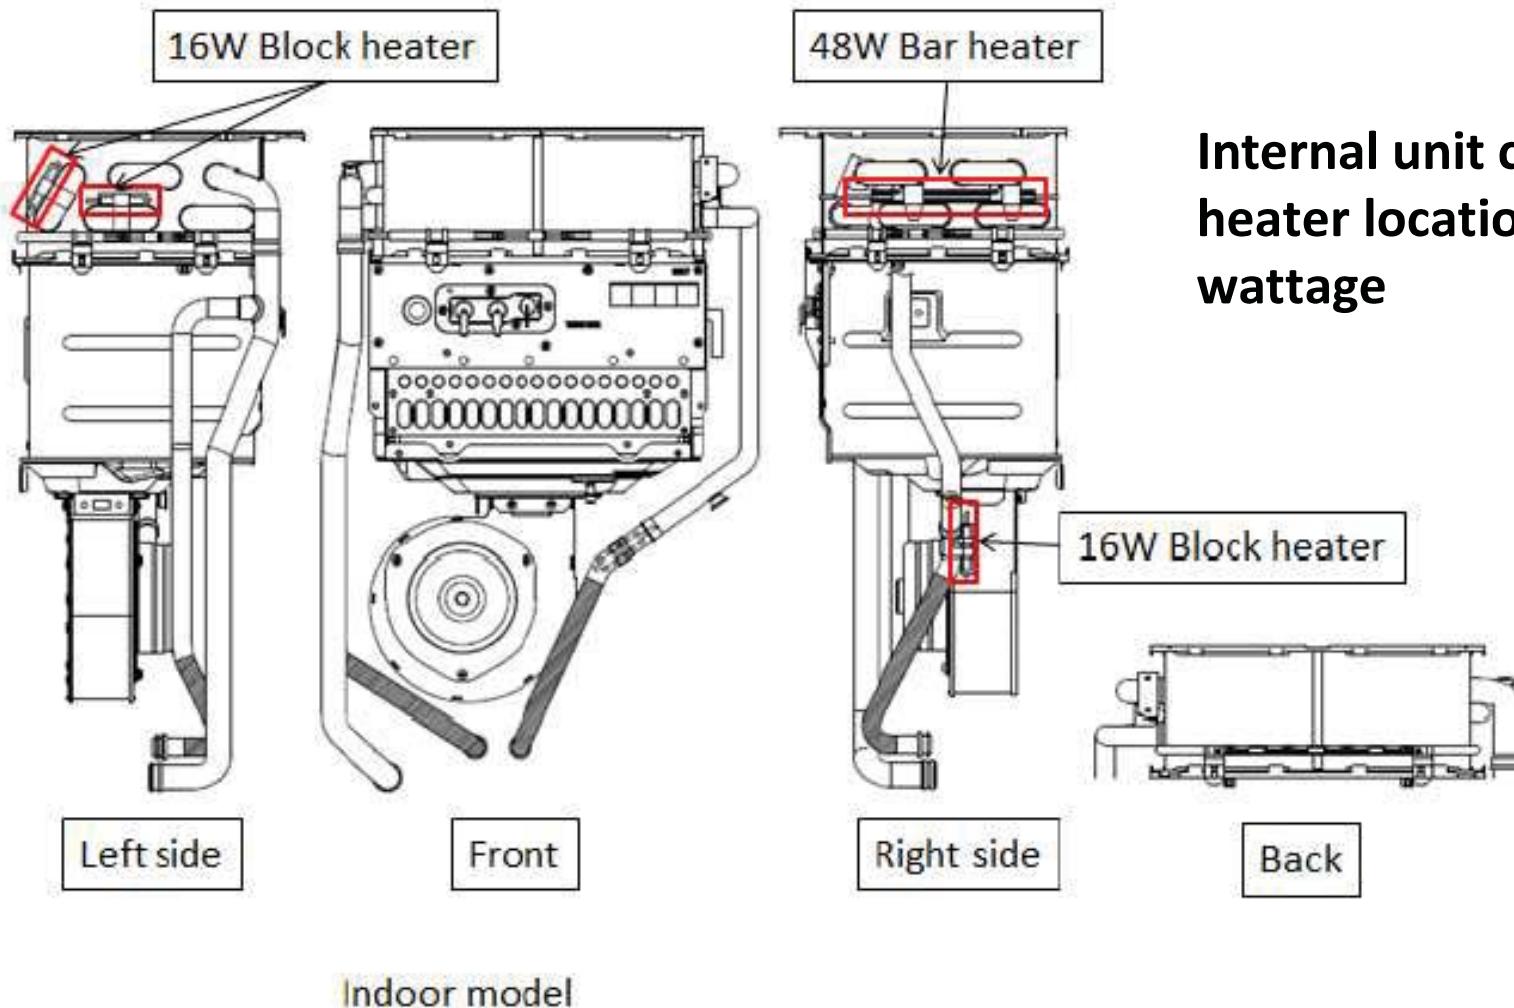

Enhancing Lives By Changing The Way Water Is Heated

Heat Exchanger Heater Locations:

Rinnai[®]

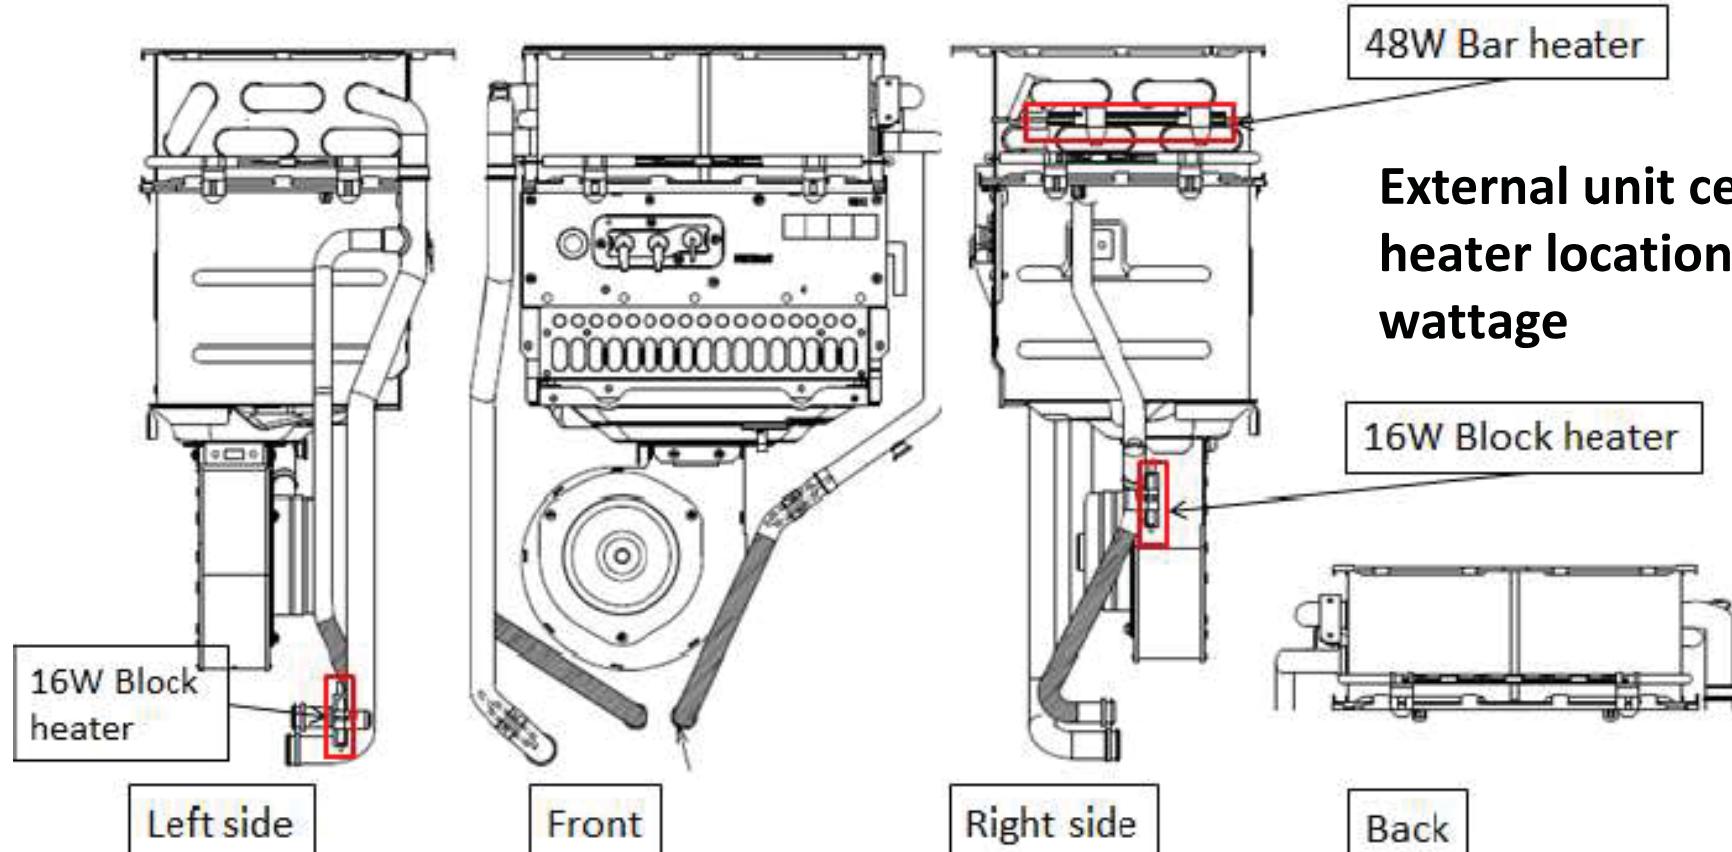

Outdoor model

Enhancing Lives By Changing The Way Water Is Heated